



NORDIC POCKET SAW™

THE ARBORIST VERSION 2

User Guide | Care Instructions | Warranty



Developed in Sweden





Thank you and congratulations
for now owning a



NORDIC POCKET SAW™

THE ARBORIST VERSION 2

We hope it will be a useful tool in many
different situations. This product may be
used by professionals or for personal use
in your own garden.

nordicpocketsaw.com
info@nordicpocketsaw.com



onetreeplanted.org



Before putting the saw to use, please take a few minutes to watch this instruction movie. It will help you getting the most out of this product.



USER INSTRUCTIONS

CARE INSTRUCTIONS

- > Keep it dry and clean
- > Keep the teeth sharp by regularly using a 4 mm / 5/32 inch round file for sharpening
- > Lubricate the chain regularly with chain oil
- > Store the saw in a dry and safe place




MAINTAINANCE

For more specific safety warnings read following pages.



Product Content

Product bag

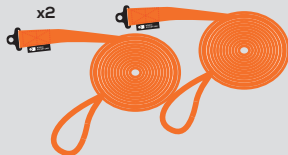

Orange strap
11 meter | 36 feet



Saw chain
43 teeth on each side
83 cm | 2.7 feet long

Throw line

Diameter: 2 mm | 5/64 inch

Length: 20 meter | 66 feet



Saw chain case



Weight
350 g | 12.3 oz



Black carabiner
Do not use for climbing

x2



Silver screw carabiner
Do not use for climbing

M6 wrench

Use this to tighten and open
silver screw carabiners




You need:

WEIGHT + THROW LINE

Step 1

Thread the throw line through the weight. Make two loops with the throw line, one in each end (1). Let the weight through the loop and tighten the throw line (2).

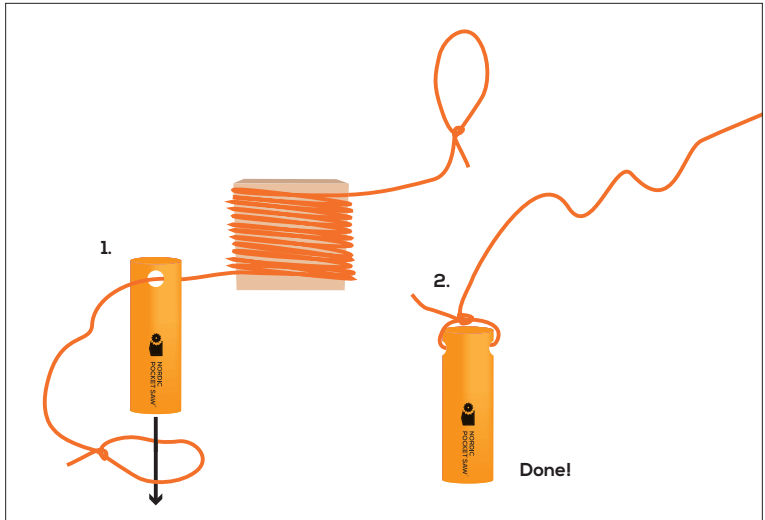


Step 2

You need:

WEIGHT + THROW LINE + BLACK CARABINER + LONG STRAP


Attach the loop on the throw line to the black carabiner. Once that is done, attach the black carabiner to the loop on one of the long orange straps. You are soon ready to make your throw.

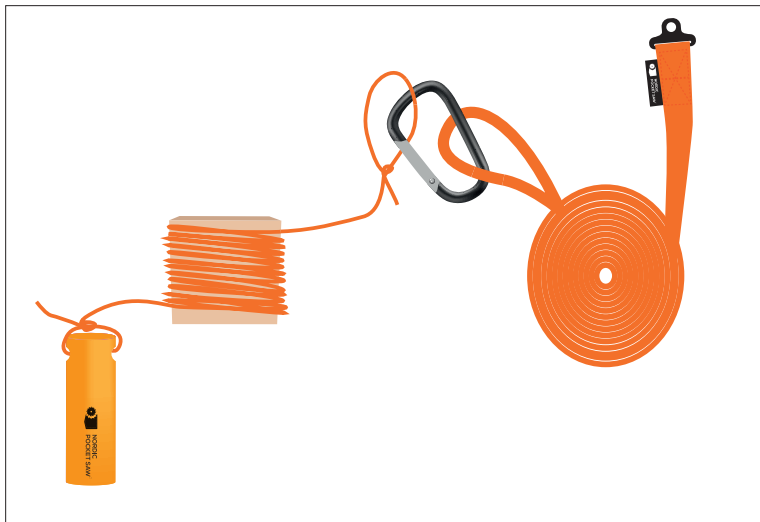

Step 3

PREPARE TO THROW WEIGHT


For a successful throw, place the throw line on the ground in a zig zag pattern together with the long orange strap before throwing (1). Make your throw over the branch you wish to cut (2).

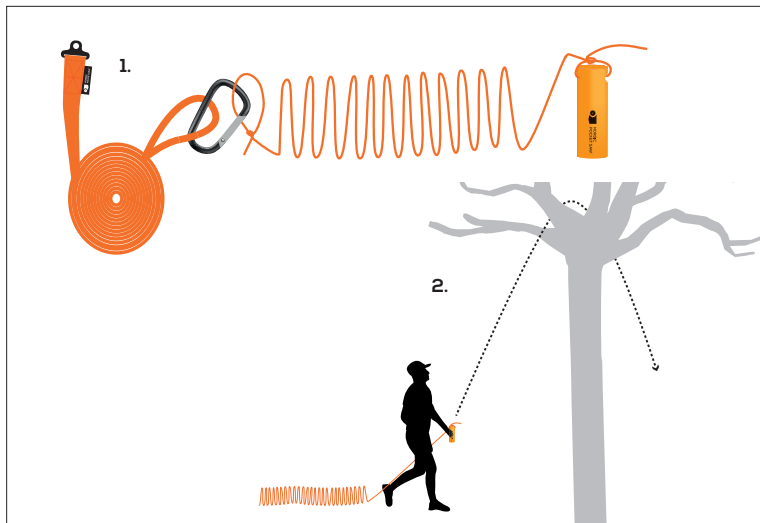

Step 4

THROW WEIGHT OVER BRANCH

The throw line is now laying over the branch. Start pulling the throw line (1) until the long strap is placed on the branch and the metal link at the end of the strap is just above the ground. Disconnect the weight, throw line and black carabiner from the orange strap and put it aside (2).

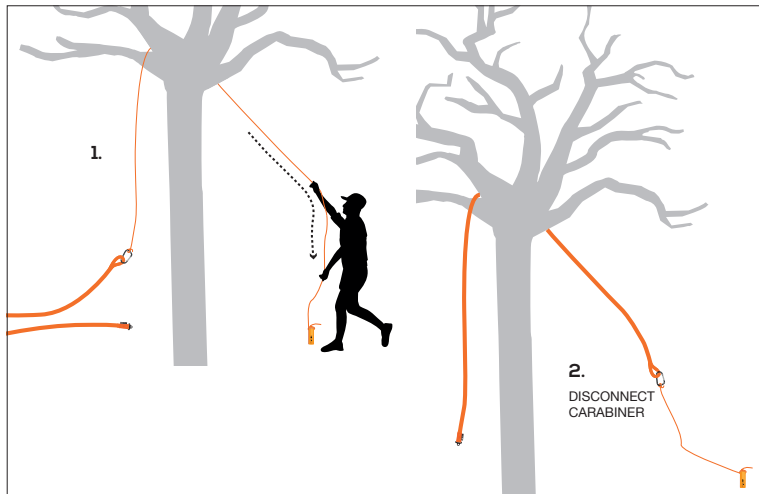


You need:

Step 5

SCREW CARABINER x2 + SAW CHAIN + LONG STRAP


It is time to connect the other details and get ready for your first cut. Connect one of the screw carabiners to the orange strap which is placed on the branch. Attach the same screw carabiner with the saw chain and attach the second screw carabiner in the other end of the saw chain. Complete the process by attaching the second orange strap with the second screw carabiner (1). Now pull the first orange strap until the saw chain is placed over the branch (2).

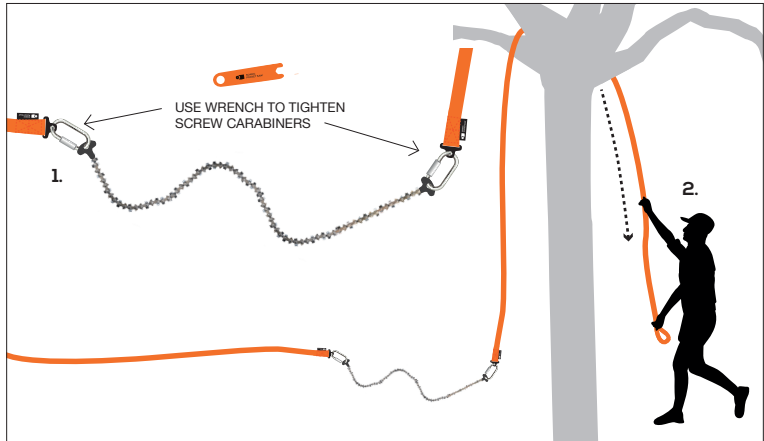

Step 6

PLACE THE CHAIN ON THE BRANCH


You have completed the preparation process!

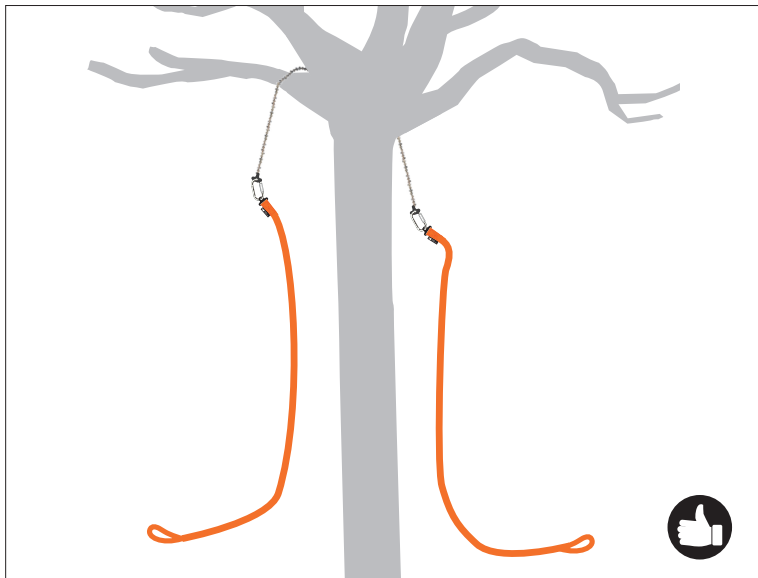

Step 7

START SAWING


Ask a friend to help you and remember to step back to a safe distance before you start cutting. Always operate this saw in pairs. Using it alone will cause the chain to get stuck when being almost through the cut, which will potentially harm the tree or damage the chain.

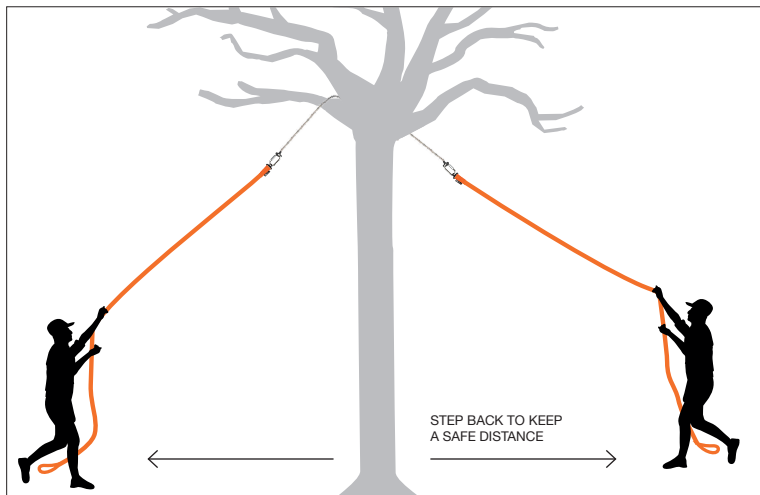

Important

CUT IN STEPS


When cutting a big and heavy branch, it is important that you cut it in steps. There are two main reasons for this. You risk causing the bark to peel down the tree trunk or/and you might damage the saw chain. For more specific information read following pages.

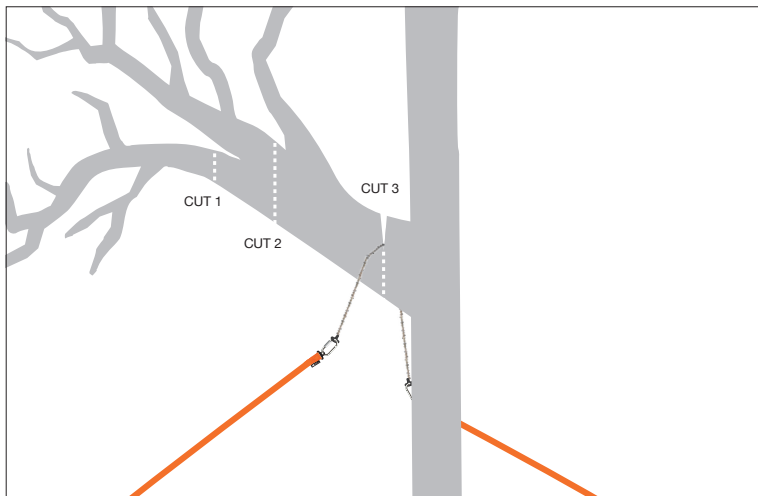

Important

REASON 1: DO NOT HARM THE TREE


The heavy weight causes the branch to split before you are through with the cut. The split peels the bark down the tree trunk and is severely harming the tree. By cutting a heavy branch in steps, you take away excessive weight before the final cut.

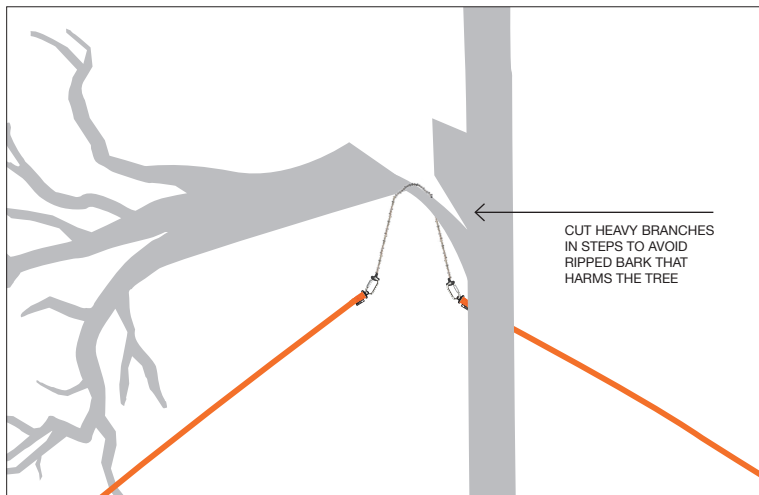

Important

REASON 2: AVOID DAMAGING THE CHAIN


Branches tends to grow heavier on the side pointing towards the equator, which means that the weight of a branch tends to be heavier on one side. Illustration below shows a branch from above which is heavier on the south side of the center than the north side. When you are almost through with the cut, the branch will fall in a south direction. This will cause a pinching point at the cut and it might damage the chain or snap it off. By cutting a heavy branch in steps, you avoid damaging the chain.

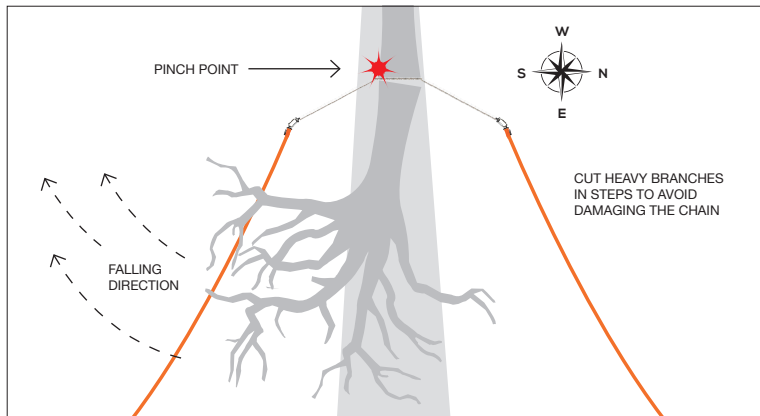

Important

ANGLE

Standing further away from the tree trunk gives a wider angle of the chain, which result in faster and smoother cutting. We recommend at least 100 degree angle.

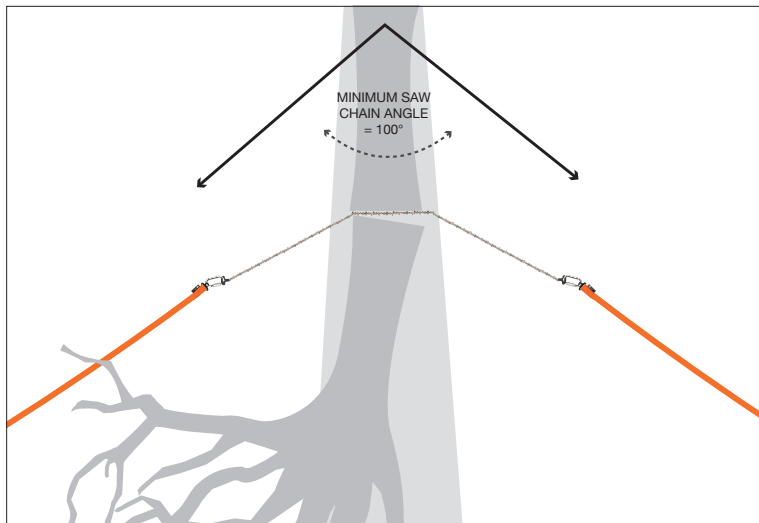


Important

PROTECTIVE EQUIPMENT

Always wear recommended protective equipment when operating the saw.



CERTIFIED
ARBORIST HELMET

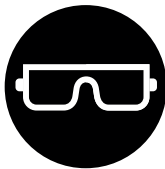

SAFETY GOGGLES



PROTECTIVE GLOVES

IMPORTANT SAFETY WARNINGS

WARNING: FAILURE TO CAREFULLY FOLLOW ALL SAFETY INSTRUCTIONS AND WARNINGS REGARDING THIS PRODUCT MAY RESULT IN BODILY INJURY, DEATH AND/OR PROPERTY DAMAGE.

The **Nordic Pocket Saw** products are not toys and should only be used by someone familiar with, and capable of following, these warnings. The product is extremely sharp and is intended for two-handed sawing of trees and parts of trees, such as branches, limbs and logs. The product is also intended for two-person sawing of high up branches.

Items to be cut must be firmly rooted or otherwise stabilized (not by hands or feet). Contact with hard objects can damage the saw. Do not use the saw on any non-wood object. Do not use the saw to cut any other material or for any unintended purpose or try to modify or disassemble the saw. Not only will this void the limited warranty, but it is also dangerous.

Keep hair, loose clothing, fingers, feet and other body parts away from the saw. You should wear proper eye (safety goggles) and hand protection when using this product. When cutting branches over your head you should wear a certified arborist helmet and step back to a safe distance in order not to get hit by fallen branches or sticks.

Before you throw the weight make sure it is properly tightened. Always use a helmet when throwing the weight. Make sure other individuals keep a safe distance from you when throwing the weight. Do not throw the weight if there is any risk of damaging property or hurting yourself or other people. Do not use this product near of power lines, telephone lines or similar. Not complying to this safety warnings may result in bodily injury/death or may damage property. Never use this product if you are not sure to operate it safely.


Keep out of reach of children. No one under the age of 18, or who have physical or other limitations, should use the Nordic Pocket Saw. Do not use this product when you are tired, distracted or under the influence of drugs, alcohol or medication causing diminished capacity. **The carabiners included in this product cannot be used for climbing.**

5-YEAR LIMITED WARRANTY

This limited warranty only covers defects in materials and workmanship of the product and only for consumer, non-commercial use by the original retail purchaser. This limited warranty is not transferable and will not cover problems or damage caused by misuse, accidents or abuse. The purchaser must return the defective product to the original retail store within 5 years of purchase, along with proof of purchase, for a determination of the warranty claim. If the claim is deemed valid, the manufacturer will repair or replace the product (at its option).

For proper Care instructions, see nordicpocketsaw.com. Any attempt to disassemble or repair the saw, except by the manufacturer, will void this limited warranty, as will misuse or abuse of the product.

THIS LIMITED WARRANTY IN LIEU OF ALL OTHER WARRANTIES, RIGHTS AND REMEDIES RELATING TO THE PRODUCT. EXCEPT FOR THE EXPRESS LIMITED WARRANTY AND REMEDY SET FORTH HEREIN, THE MANUFACTURER EXPRESSLY DISCLAIMS ALL OTHER WARRANTIES AND GUARANTEES, EXPRESS OR IMPLIED, IN FACT OR BY OPERATION OF LAW, INCLUDING WITHOUT LIMITATION IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. THE MANUFACTURER EXPRESSLY DISCLAIMS ANY LIABILITY BASED ON ANY THEORY, WHETHER CONTRACT, TORT, PRODUCT LIABILITY OR OTHERWISE FOR ANY SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY SORT. THIS LIMITED WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. YOU MAY ALSO HAVE OTHER RIGHTS WHICH MAY VARY FROM STATE TO STATE.

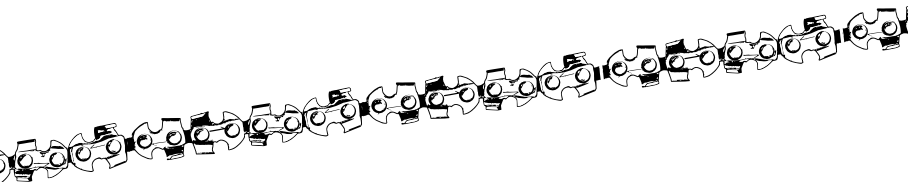

For information in other languages please visit
nordicpocketsaw.com



**NORDIC
POCKET SAW™**

We appreciate if you tag your stories,
pictures or videos with **@nordicpocketsaw**
and **#nordicpocketsaw**. To receive
our stories and updates, sign up at
nordicpocketsaw.com

/The Nordic Pocket Saw Team

